


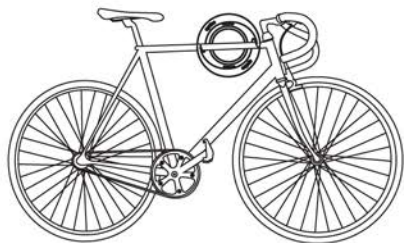


Store your bike with style


www.cycloc.com




A

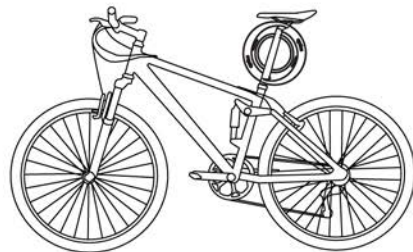

B

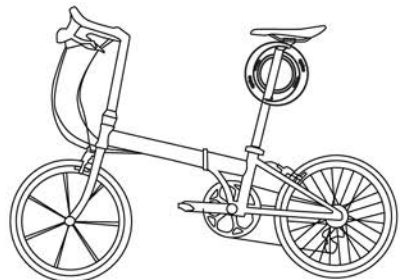


C

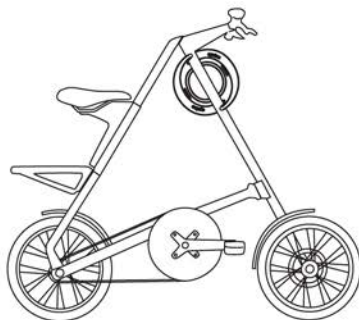



D





E

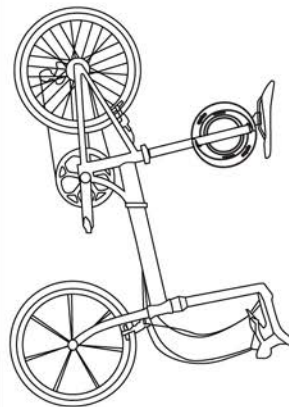



F

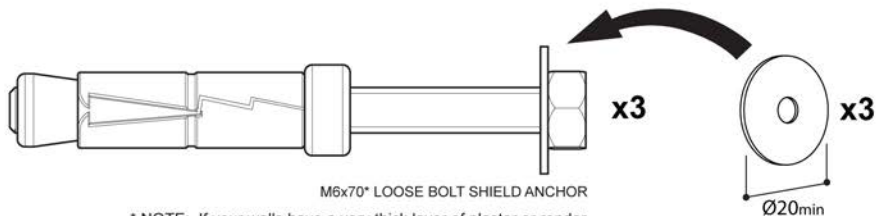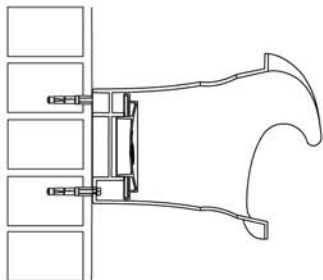





* NOTE: If your walls have a very thick layer of plaster or render use a longer fixing to ensure the anchor is in the brick.

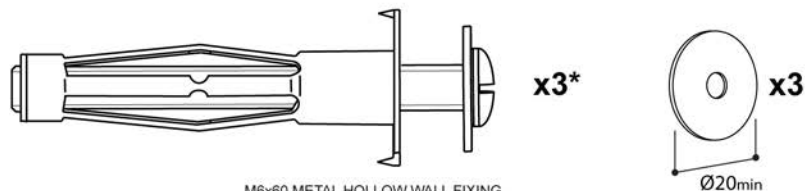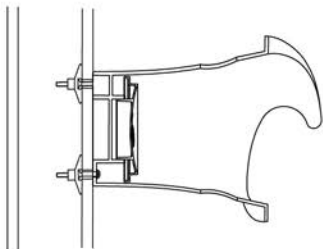


*NOTE: when the Cycloc is mounted on a hollow wall, the structure must be capable of taking the additional load. Ideally at least one hole should be into a 'timber stud' - with a suitable size of wood screw.

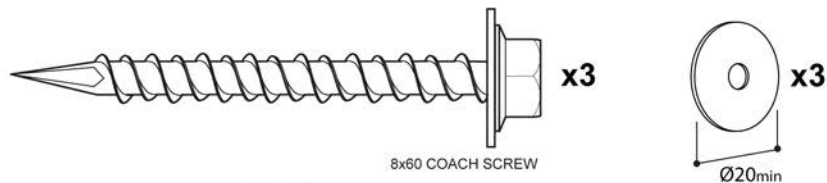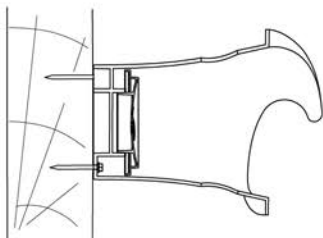



Scale 1:1

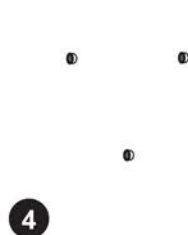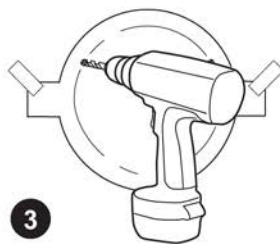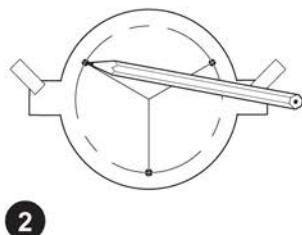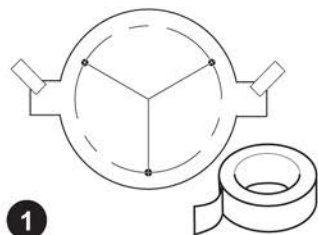




A

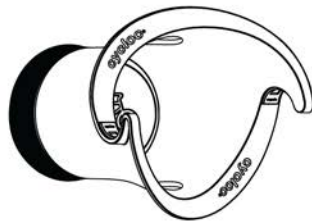


B

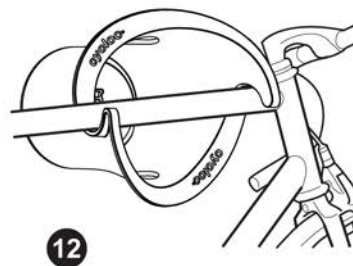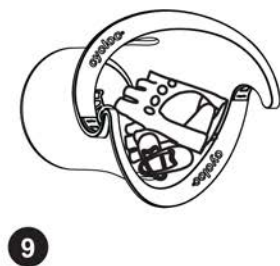


B

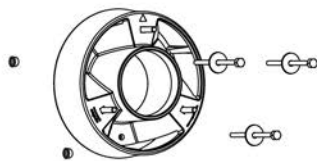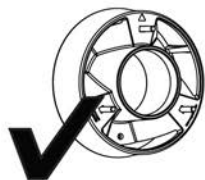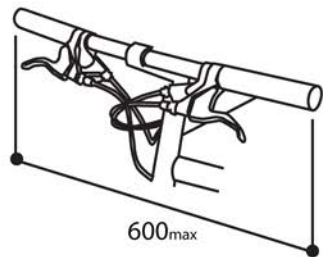


5B

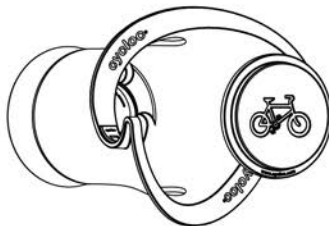

7B


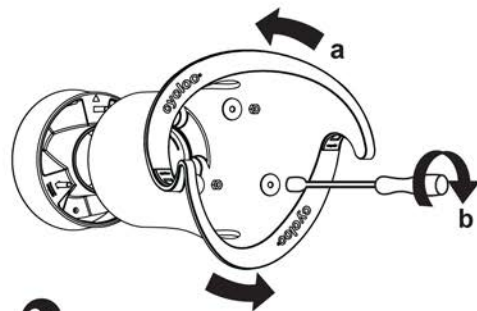


6B

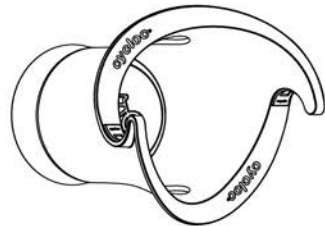


8B


A

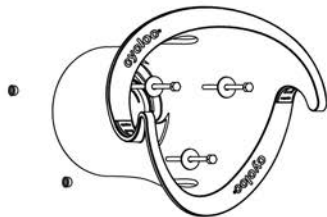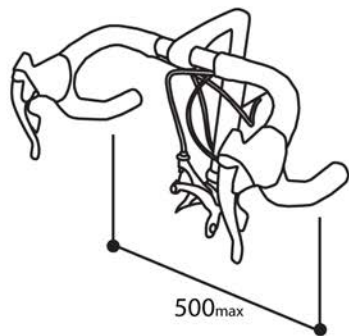

5A

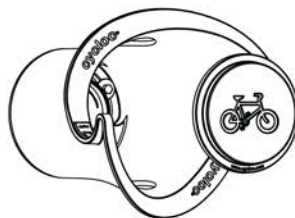

7A

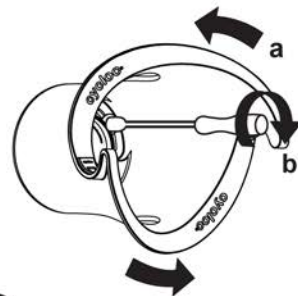

6A



8A

